



# Cube Care Tie Back Installation Instruction

Revised 7/7/18

**Cube Care's Tie Backs** reduces excess stacking and provides hold down of cubicle curtains against the wall. The methods of a tie back provides **cleanliness, clear easy access** and a **better view** for you and your patients. We provide you the ability of "do-it yourself" installation instructions. The use of **Cube Care's Tie Backs** come with either **adhesive tape** or **screw(s)** installation options. Both options are available for your facility's walls.

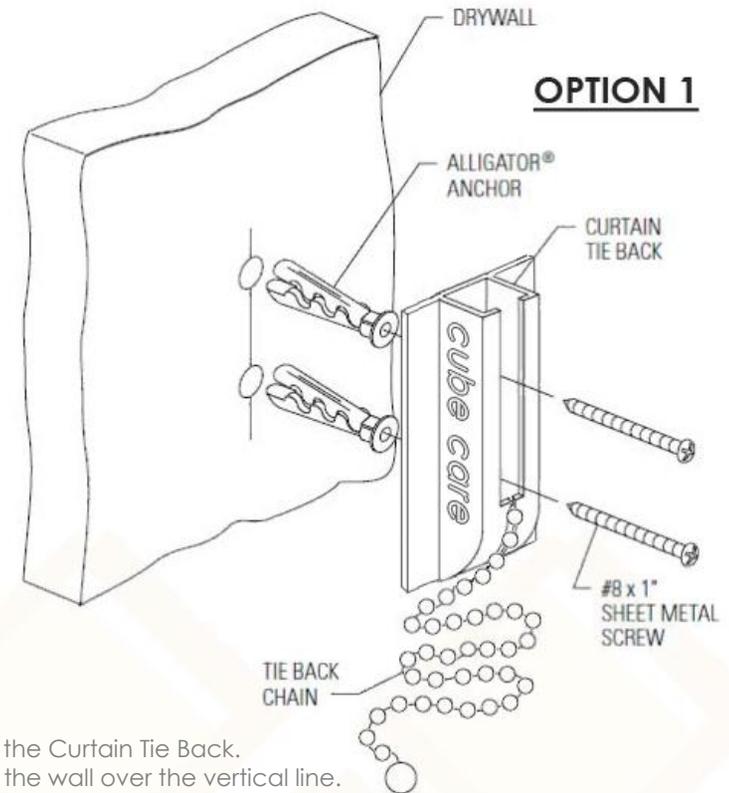

## OPTION 2

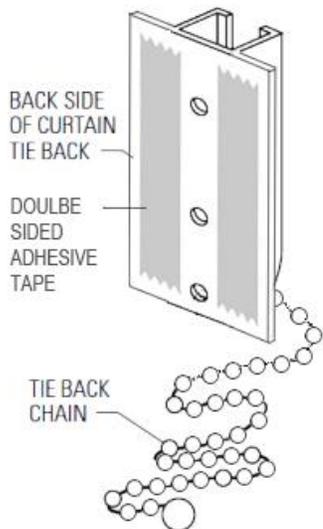

### INSTALLATION INSTRUCTIONS

#### OPTION 1 – INSTALLATION USING METAL SCREWS

**STEP 1.** Draw a plumb, 2" long vertical line on the wall where you want to locate the Curtain Tie Back.

**STEP 2.** Use the Curtain Tie Back as a template and trace the mounting holes on the wall over the vertical line.

**STEP 3.** Drill 1/4" holes in the wall for the alligator anchors and push the anchors into the holes on the wall.

**STEP 4.** Insert the small end bead of the beaded chain into the bottom hole on the back of the Curtain Tie Back. For curtains with less fabric cut the beaded chain to a shorter length.

**STEP 5.** Line up Curtain Tie Back with alligator anchors in the wall. Position the curtain tie back on the wall while keeping the beaded chain inserted in the back of the Curtain Tie Back. Screw into the alligator anchors with the #8 x 1" sheet metal screws.

**STEP 6.** Slide the curtains to the wall by the Curtain Tie Back. Wrap the beaded chain around the curtains and insert the large ball into the top of the Curtain Tie Back.

#### OPTION 2 – INSTALLATION USING ADHESIVE TAPE

**STEP 1.** Make sure all surfaces are clean and dry.

**STEP 2.** Cut 4 inches of tape for every 1 pound. Do not remove protective liner yet.

**STEP 3.** Apply tape to back of object press firmly on liner for good adhesive contact.

**STEP 4.** Remove liner and press object firmly into place on wall.

#### Notes:

\* For optimal bond performance apply when temperature is between 70 degrees F and 100 degrees F.

\* This is a permanent tape and may cause damage if removed. If you must remove the object, insert a knife behind the object and carefully cut the tape down the middle. Remove remaining tape with thumbnail.

\* Not recommended for use on wallpaper and other delicate surfaces. Do not use in spaces where injury might occur if mounted object fell.